



SHAKTI LC 4G RMS DONGLE

**SMART CONNECTIVITY
FOR SMARTER
MONITORING**



Remote
Monitoring & Control



In-built
Data Logger



Compatible with
4G LTE





SHAKTI LC 4G RMS DONGLE

1. PRODUCT APPEARANCE




(Figure 1)

2. INSTALLATION & CONNECTION

For installing the SHAKTI IoT dongle. Follow these Steps :

STEP 1


Remove the cover and carefully take out the motherboard.

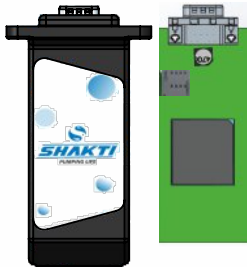

(Figure 2)

STEP 2

Insert SIM card as per the correct direction marked.

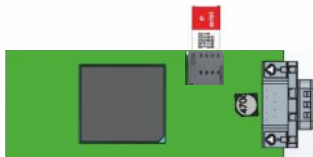

(Figure 3)

STEP 3

Put the motherboard back into the enclosure.



(Figure 4)

STEP 4

Insert the dongle into DB9 serial port and use two M3x10 screws to fix the dongle along with gasket.

3. TROUBLESHOOTING

- (1) Contact Shakti to integrate IoT Dongle with other products & solutions.



NEED HELP?

Contact our support team for assistance and integration.



SHAKTI PUMPS (INDIA) LIMITED

CIN : L29120MP1995PLC009327 | Web: www.shaktipumps.com
E-mail: info@shaktipumps.com, sales@shaktipumps.com

Corporate Office :

Plot No. C-04, Silver Spring, Phase-2,
Business Park, Indore-452020. (M.P.) INDIA.
Tel.: +91 731 3635000

Regd. Office / Factory Add. :

Plot No. 401, 402 & 413, Industrial Area,
Sector - 3, Pithampur-454774,
Dist. Dhar (M.P.) INDIA.
Tel.: +91 7292 410500

India : Toll Free No. 1800 103 5555 | Other Countries : +91-7292 410500

Authorised Dealer / Distributor :